

PROINERT PRESSURE GAUGE INSTALLATION

Fike is issuing this bulletin as a reminder of the proper way to install a ProInert pressure gauge. This procedure applies to both 200 bar and 300 bar systems. It is quite simple and involves the following steps:

- 1) Carefully screw the pressure gauge into the pressure gauge port, being careful not to cross the threads.
- 2) Continue screwing the gauge in until it bottoms out into the port as shown in Figure 1. Do not screw past the point of bottoming out.



Figure 1

- 3) To achieve proper orientation of the gauge for visual monitoring, unscrew the gauge a maximum of one revolution.

Over tightening the gauge or loosening it more than the allowable one revolution can result in a leak and give a false indication of the cylinder pressure.