



**RESET MULTI-TOOL INSTRUCTIONS – P/N 02-14782**


Remove the UVO from the ProInert Valve by removing Retaining Clip.  
Remove Safety Pin and pull the Manual Strike Button knob until it resets (internal click is heard).

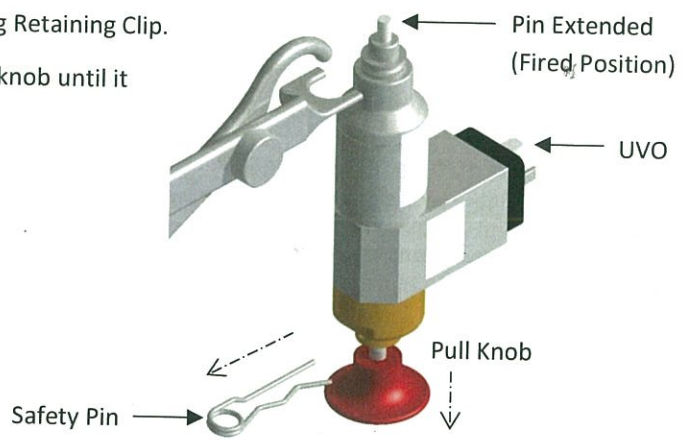

Align the forked end of the anvil handle around the grooved end of the UVO tip. It is recommended to use the additional Pin Tool included with the Reset Multi-tool.

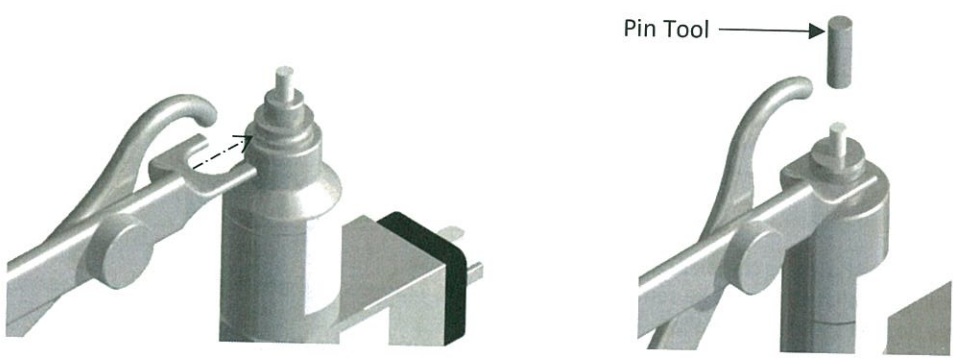

Squeeze Reset Multi-tool handles until UVO pin resets (clicks into place).

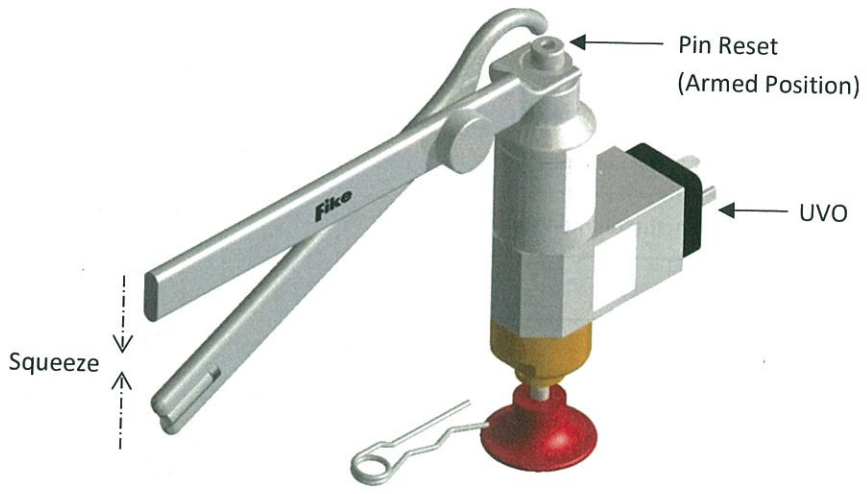

**IMPORTANT NOTE:** Check that UVO pin is reset to ensure device is armed before inserting on ProInert Valve.